



## Accessory Installation Instructions

### **Ready-To-Tile Seats**

**Note:** Seats can be cut-to-fit with a common hand saw.




**Installation:** BEFORE APPLYING TILE TO WALLS OR SHOWER BASE.

If needed, cut seat to fit the desired area using a hand saw. “Test fit” the seat to ensure that it “snuggly” fits the desired area. Using a 1/4” or 3/8” notched trowel, apply latex modified thin-set to the wall and shower base area where the seat will be installed. “Firmly” settle the seat into the thin-set to ensure proper setting. Allow thin-set to cure per thin-set manufacturers instructions.

### **Build-A-Niche**

Don't Limit Your Imagination

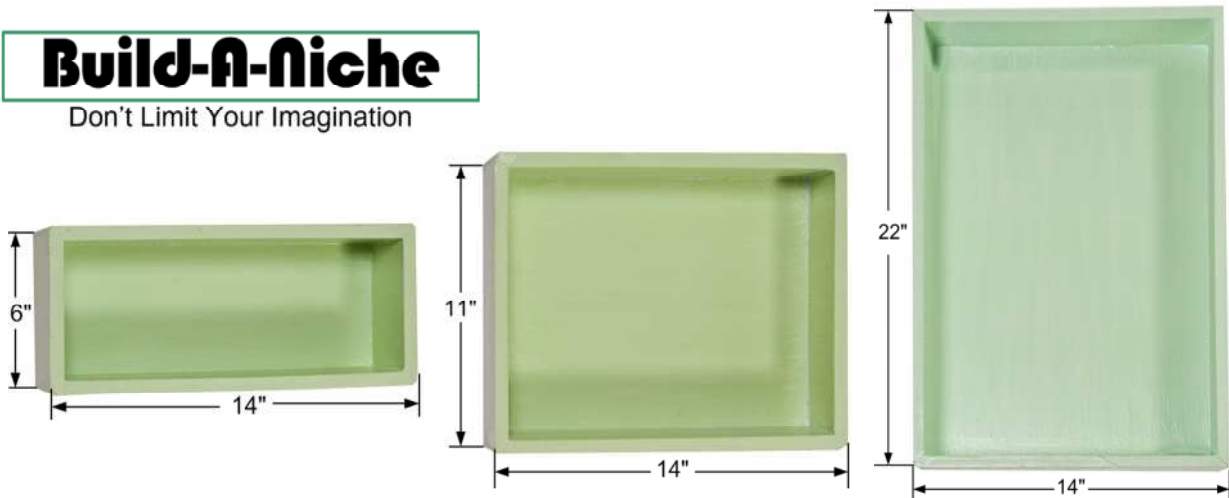

**Installation:** BEFORE INSTALLING WALL BACKERBOARD.

Securely attach niche/s to studs using exterior deck screws. Allow the front edge of the niche/s to protrude from the edge of the studs equal to the thickness of the tile backerboard being used. Measure and “cut-out” the backerboard area where niche/s will protrude. Install backerboard. Tape the seams between the backerboard and the niche/s. Waterproof (ShowerSeal or equal is recommended) the taped area. Tile walls and niche/s as usual. TIP: A router or Rotozip® can be used to obtain the “cut-out” depending on the type backerboard used.