



How To Measure For Your KBRS Shower Base

Note: KBRS will manufacture your shower base to the dimensions given on the order forms. Your shower base will be within a 1/16" tolerance of the dimensions given on the order form.

Step 1: Stud-Stud Measurements: Measure the opening of the shower area between studs. Measure the stud to drain center off 3 walls.

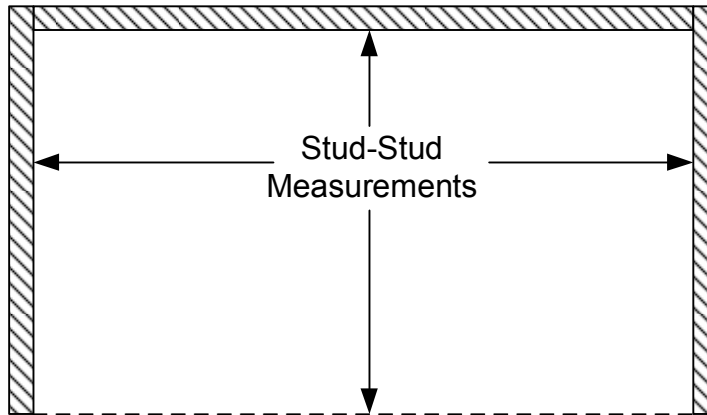

Step 2: Adjust Measurements: Reduce "stud-stud" measurements to allow for a 1/4" space between the outside perimeter of the shower base and the stud. The 1/4" space allows the shower base to be re-positioned in all directions if necessary.

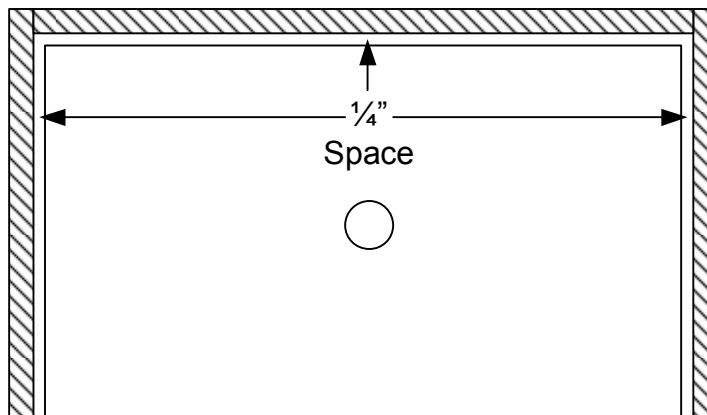

Step 3: Entering Measurements: Enter the adjusted measurements on the order forms. **IMPORTANT: Be sure to adjust the drain center measurements to allow for the 1/4" adjustment.**